


Disconnect plug connection (1) from mass air flow sensor.

Unfasten hose clip (2).


Pull off hose.

E38 M62: Disconnect plug connection on temperature sensor for intake air.

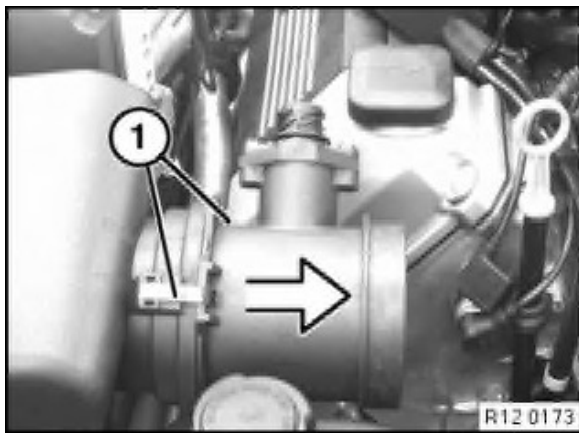

Open clips (1).


Remove air-mass sensor.

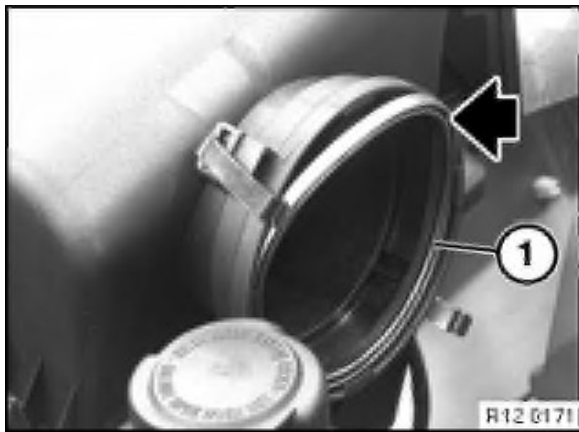

#### Installation:

Replace gasket (1) between mass air flow sensor and upper section of air filter.

To facilitate assembly, coat gasket with acid-free grease.

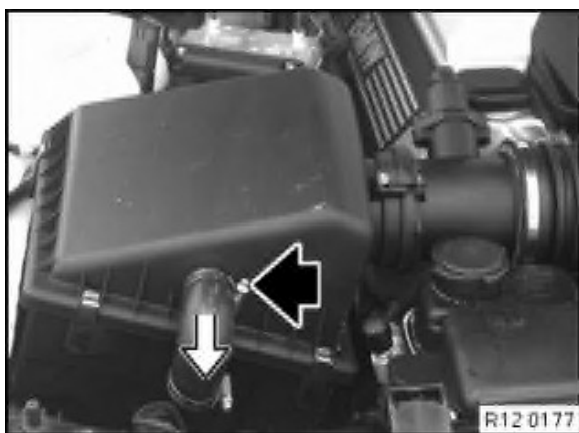

M60 B30:

Loosen hose clamp.

Pull off hose.



Unscrew screw.

Remove complete filter housing.